

JackRabbit OG Instructions



Earth+Kin has partnered with JackRabbit to allow the e+kMULE to be used anywhere the JackRabbit goes. When towing the e+kMULE with the JackRabbit, *only use the custom connector in this packet*. Do not use the traditional rear axle plate that ships with the e+kMULE. Doing so will void the warranty for your JackRabbit!

What's in the box



1 x JackRabbit custom connector




2 x M5 Bolts



1 x Torx key


Instructions

1

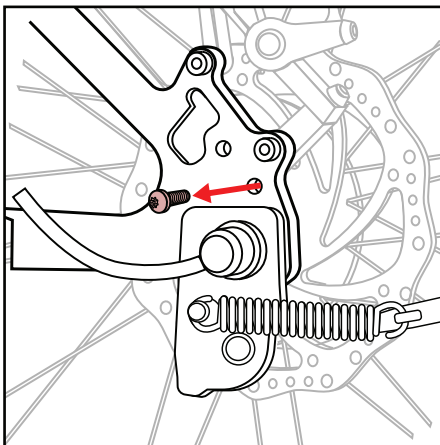


Remove the existing M5 bolt from the kickstand plate as shown above. If there is no bolt in this location that is okay!

2

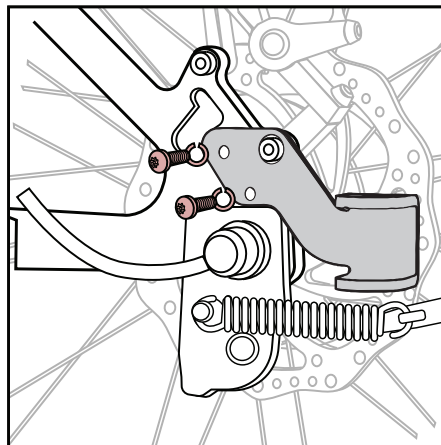

Thread the two M5 bolts and lock washers through the MULE connector and into the frame of the JackRabbit as shown.

3

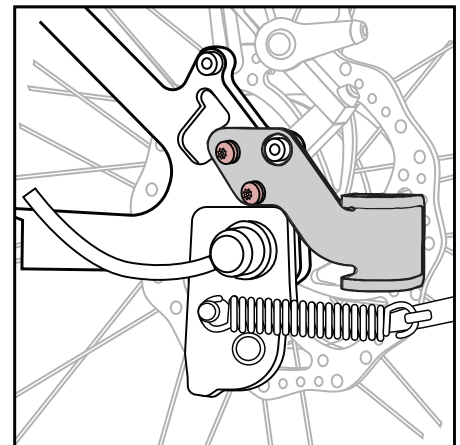

Use the L-shaped Torx key to tighten the bolts. Tighten well! If using torque wrench, tighten to 12nM.