

**Included in the package:**

- PEDAL Quickrack (x1)
- M5 x 45mm Hex Bolt (x1)
- M5 x 20mm Hex Bolts (4x)
- M5 Locknut (1)
- M5 Hex Key (x1)




**⚠ WARNING**

*The MULE is a wild animal!*

Before towing it carefully review the Safety Guidelines in your Owner's Manual. Failure to do so could result in **SERIOUS INJURY** or **DEATH**.



**MULE Weight Capacity Limit - 100lbs**  
**Speed Limit when towing - 5mph**

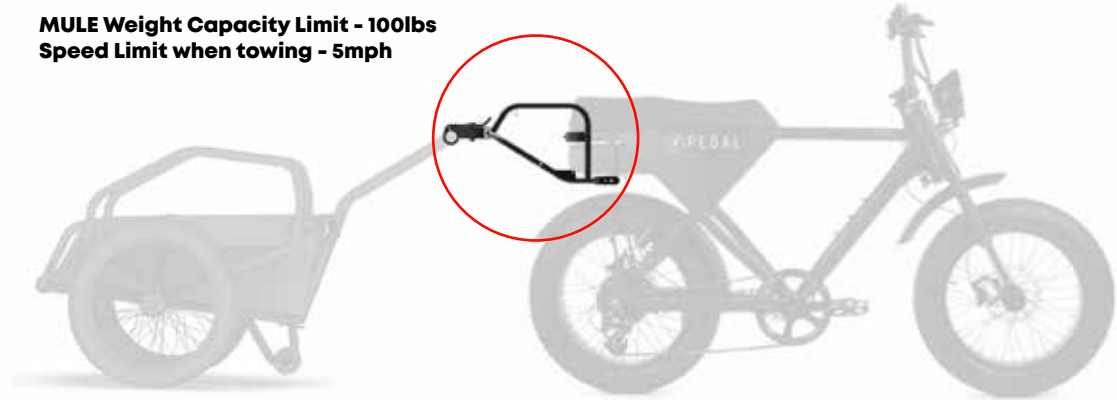

**PEDEGO Core 2.0/AWD INSTALLATION**



**1** Remove PEDAL battery. Align central mounting hole of Quickrack with the rear of your PEDAL seat. Thread M5 x 45mm bolt through Quickrack through bike frame and secure locknut.



**2** Insert 2pcs M5 x 20mm bolts through the Quickrack and into side mounting holes on bike frame. Repeat x's 2 on opposite side of the Quickrack. Don't overtighten.